

Table of Contents

INTRODUCTION	4
HOW DOES IT WORK?	5
Reserved Pins & GPIOs	5
Fusion of Software with Hardware	8
• Schematic	10
DATA STRUCT	11
Struct Walkthrough	11
Why Useattribute((packed))?	12
TRANSMITTER	13
Data Encapsulation	13
RECEIVER	
WORK-IN-PROGRESS WALK THROUGH	15
Finished Work	15
• Chassis	16
• Wiring	17
Motor Wires Harness	18

ByteRider documentation



INTRODUCTION

HOW DOES IT WORK?

The BitByteRider RC car is powered by ESP32-C3 Breadboard & Power adapter development board.

Reserved Pins & GPIOs

The following table summarizes GPIOs and pins reserved for operations purposes.

The GPIO numbers correspond to those on the ESP32-C3 WROOM microcontroller. The Pin number corresponds to the pin on the Breadboard and Power adapter development board.

x- and y- axis

The **GPIOO** and **GPIO1** assigned to measuring the voltage of x- and y- axis of the Joystick. Lastly, there is a group of GPIO pairs responsible for PWM for DC motors.

Direction and Speed

The pairs of DC motors on the left side are wired to the dedicated PWM channels. This means that *ESP32-C3 Breadboard DevBoard* can control rotation speed and direction of DC motors in pairs only (i.e. left and right side). Consequently, only four PWM channels are sufficient for controlling the direction of the RC car. Based on this constraint, the RC car can only move front, back, and turn/rotate left and right. Any other movements are not possible (i.e. diagonal or sideways).

A pair of PWM channels are required for defining rotation speed and direction of the DC motors on each side. In particular, **GPIO6** and **GPIO5** provide PWM to the left- and right- side DC motors to rotate in a **clockwise** direction. Similarly, **GPIO4** and **GPIO7** provide PWM to the left- and right- side DC motors to rotate in a **counter-clockwise** direction. Changing PWM on each channel determines the speed and direction of the RC car.

The following images illustrate various PWM duty cycles registered by oscilloscope (duty cycles 0%, 48% and 91%, resp.).



DC Motor PWM duty cycle 0%



DC Motor PWM duty cycle 47.6%



DC Motor PWM duty cycle 90.8%

GPIO	Pin	Function	Notes
0	16	Joystick x-axis	ADC1_CH0
1	15	Joystick y-axis	ADC1_CH1
8	5	Joystick push button	
6	4	PWM for clockwise rotation of left-side motors	LEDC_CHANNEL_1
5	3	PWM for clockwise rotation of right-side motors	LEDC_CHANNEL_0
4	2	PWM for counter-clockwise rotation of right-side motors	LEDC_CHANNEL_2
7	6	PWM for counter-clockwise rotation of left-side motors	LEDC_CHANNEL_3

Fusion of Software with Hardware

The struct for storing motors PWM values.

```
struct motors_rpm {
    int motor1_rpm_pwm;
    int motor2_rpm_pwm;
    int motor3_rpm_pwm;
    int motor4_rpm_pwm;
};
```

The function for updating motors' PWM values.

```
// Function to send data to the receiver
void sendData (void) {
                                      // Declare data struct
    sensors_data_t buffer;
    buffer.crc = 0;
    buffer.x_axis = 0;
    buffer.y_axis = 0;
    buffer.nav_bttn = 0;
    buffer.motor1 rpm pwm = 0;
    buffer.motor2_rpm_pwm = 0;
    buffer.motor3 rpm pwm = 0;
    buffer.motor4 rpm pwm = 0;
    // Display brief summary of data being sent.
    ESP LOGI(TAG, "Joystick (x,y) position ( 0x%04X, 0x%04X )",
(uint8_t)buffer.x_axis, (uint8_t)buffer.y_axis);
    ESP_LOGI(TAG, "pwm 1, pwm 2 [ 0x%04X, 0x%04X ]",
(uint8_t)buffer.pwm, (uint8_t)buffer.pwm);
    ESP_LOGI(TAG, "pwm 3, pwm 4 [ 0x%04X, 0x%04X ]",
(uint8_t)buffer.pwm, (uint8_t)buffer.pwm);
    // Call ESP-NOW function to send data (MAC address of receiver,
pointer to the memory holding data & data length)
    uint8 t result = esp now send(receiver mac, &buffer,
sizeof(buffer));
    // If status is NOT OK, display error message and error code (in
hexadecimal).
    if (result != 0) {
       ESP_LOGE("ESP-NOW", "Error sending data! Error code:
0x%04X", result);
       deletePeer();
    else
```

```
ESP_LOGW("ESP-NOW", "Data was sent.");
}
```

The onDataReceived() and onDataSent() are two call-bacl functions that get evoked on each corresponding event.

The rc send data task() function runs every 0.1 second to transmit the data to the receiver.

```
// Continous, periodic task that sends data.
static void rc_send_data_task (void *arg) {
    while (true) {
        if (esp_now_is_peer_exist(receiver_mac))
            sendData();
        vTaskDelay (100 / portTICK_PERIOD_MS);
    }
}
```

Schematic



1 DATA STRUCT

DATA STRUCT

The struct serves as the data payload for sending control signals from transmitting device to the receiver using ESP-NOW. In addition, it may contain additional data such as telemetry, battery status, etc.

The *sensors_data_t* struct is designed as a data payload that encapsulates all control commands and sensor states relevant to the vehicle's operation. It's intended to be sent from a transmitting device (like a remote control or master controller) to a receiver (such as a microcontroller onboard the vehicle).

```
typedef struct {
                                     // Joystick x-position
   int
                x_axis;
   int
                                     // Joystick y-position
                y axis;
   bool
                nav_bttn;
                                     // Joystick push button
                                     // LED ON/OFF state
   bool
                led;
   uint8_t
                                     // PWMs for 4 DC motors
                motor1_rpm_pwm;
   uint8_t
                motor2_rpm_pwm;
   uint8_t
                motor3_rpm_pwm;
   uint8 t
                motor4_rpm_pwm;
} __attribute__((packed)) sensors_data_t;
```

When used with communication protocols like ESP-NOW, this struct is **encoded** into a byte stream, then **transmitted** at regular intervals or in response to user input, and finally **decoded** on the receiving end to control hardware.

Struct Walkthrough

x_axis and y_axis fields capture analog input from a joystick, determining direction and speed. nav bttn represents a joystick push-button.

led allows the transmitter to toggle an onboard LED and is used for status indication (e.g. pairing, battery warning, etc).

motor1_rpm_pwm to motor4_rpm_pwm provide individual PWM signals to four DC motors. This enables fine-grained speed control, supports differential drive configurations, and even allows for maneuvering in multi-directional platforms like omni-wheel robots.

Why Use __attribute((packed))?

ESP-NOW uses fixed-size data packets (up to 250 bytes). The __attribute__((packed)) removes compiler-added padding for precise byte alignment.

As *packed* attribute tells the compiler not to add any padding between fields in memory, this makes the struct:

- Compact
- Predictable for serialization over protocols like UART or ESP-NOW
- Ideal for low-latency transmission in embedded systems

This ensures the receiver interprets the exact byte layout you expect, minimizing bandwidth and maximizing compatibility across platforms.

TRANSMITTER

TRANSMITTER


Data Encapsulation

14 RECEIVER

RECEIVER

WORK-IN-PROGRESS WALK THROUGH

Finished Work

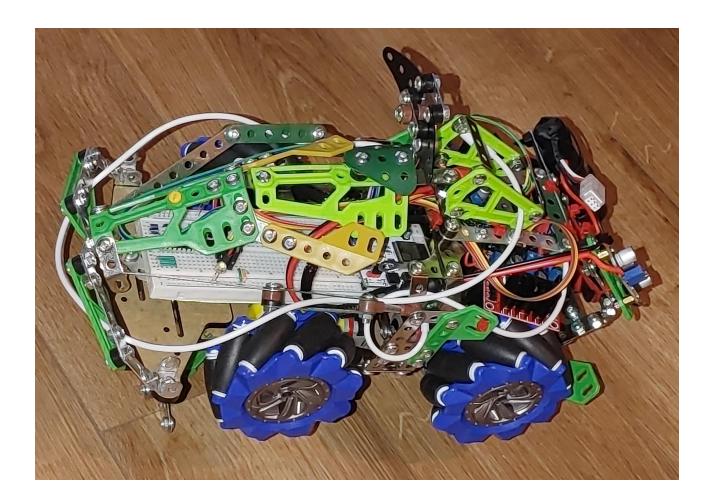

Chassis



Completed chassis with only DC motor controllers installed.

Wiring



Completed wiring.

Motor Wires Harness



DC Motors wires secured inside harnes.

